



WINDOW CLEANING  
WAREHOUSE



For technical support or any other enquiries please scan the QR code or visit:

[WWW.WINDOWCLEANINGWAREHOUSE.CO.UK](http://WWW.WINDOWCLEANINGWAREHOUSE.CO.UK)




## Backpack Instructions

### Prior to use:

- Unpack the BigBoy V3 and check the components to confirm nothing has been damaged in transit.
- Before use, set the backpack to charge and allow for a full charge. When connected you'll notice the light on the charger change from green to red. When that light reverts back to green, the backpack is at full charge.
- First 3 uses, allow to charge for 3 hours following the light turning green.

### Best Practice:

- To prolong the life of the battery, it is good practice to keep the battery charged and not to leave on low battery for long periods of time.
- If storing the backpack for long periods of time, it is good to intermittently charge the backpack and discharge the pump/nozzle for a short period of time.
- Store the backpack in a cool dry place and in an upright position.

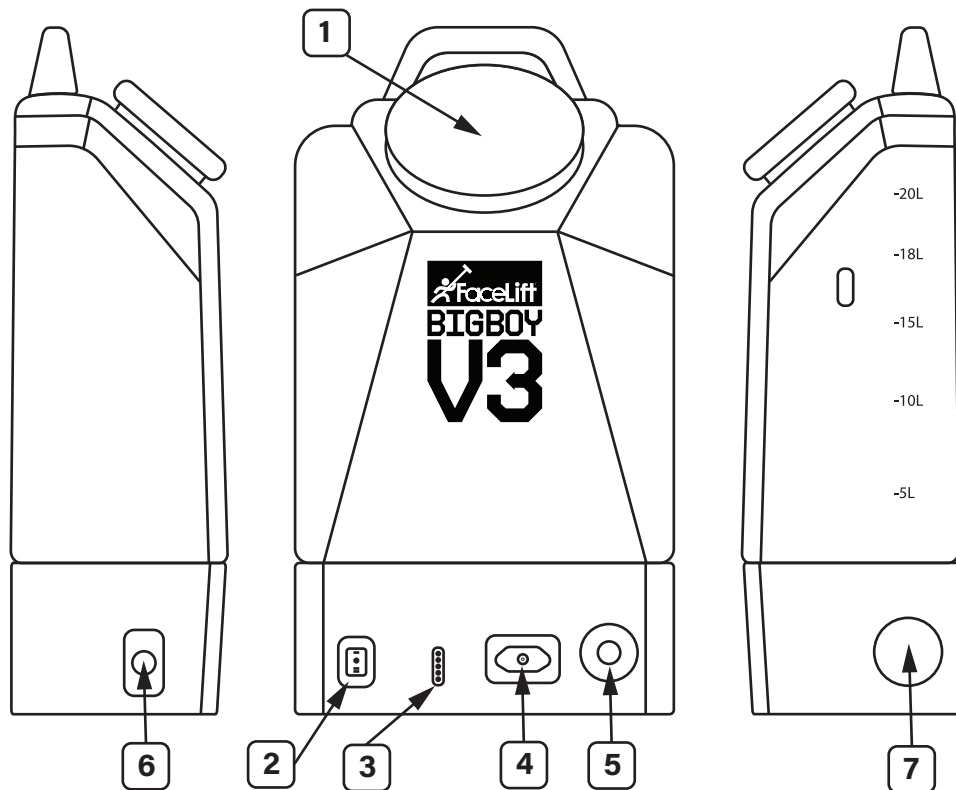

- 1. Tank Lid**
- 2. 3 Position Rocker Switch (On/Off)**
- 3. Battery Indicator Lights**
- 4. Charging Point**
- 5. Hose Attachment Point (Water Outlet)**
- 6. Flow Controller Dial**
- 7. Fuse Service Port**

## Battery Indicator Lights:

On the backpack itself, you'll find lights that indicate the current condition of the backpack.

- All GREEN lights lit - Fully Charged
- Two GREEN lights lit - High Charge / Partially Discharged
- Single GREEN light lit - Medium Charge / Significantly Discharged
- Single YELLOW light - Low Charge: Connect to power source soon
- RED Light / Warning Alarm - Very Low Battery: Charge Immediately

## Using the Backpack:

To begin using the backpack, connect the hose attachment to the backpack and connect a water fed pole to the orange and black hose connector found at the end of this hose attachment.

Press the three position rocker switch either to the "I" or "II" position. Using the "I" setting will give you variable flow control. This mode allows you to increase or restrict the flow as necessary by twisting the flow controller dial. Using the "II" setting will give you full flow mode. This mode simply runs the pump at full power.

Using the battery indicator lights as a guide, use the backpack until the battery warning indicator light switches on. Then switch the backpack off by putting the three position rocker switch at the "O" position. Disconnect the water fed pole and proceed to charge the backpack as necessary.

## Fuse Service Port:

To change the fuse, simply pop open the circular fuse compartment cover, reach inside and bring the fuse out, and replace with a 10 amp fuse. Ensure you replace the cover after replacement.